


# STAXX FISHING KIT INSTALLATION INSTRUCTIONS

## KIT CONTENTS

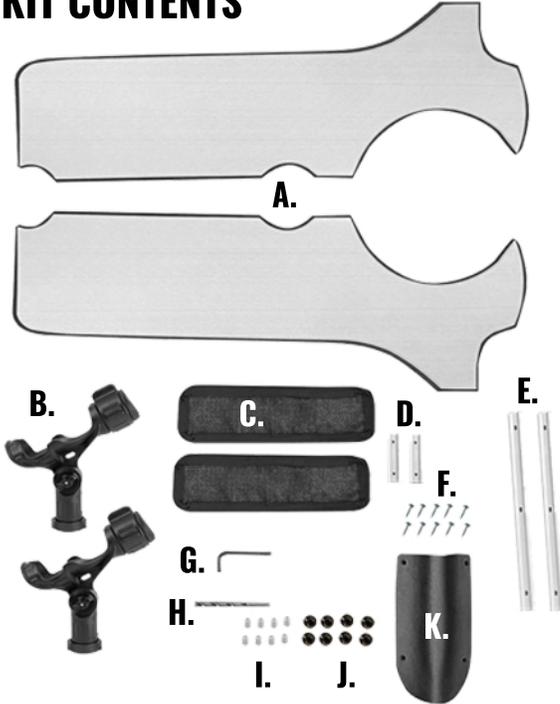

Congratulations on the purchase of your Staxx Fishing Kit! Here's what's included.

- A. Dual-Layered Deck Pad
- B. 2x Omega Rod Holder
- C. 2x Mesh Tackle Pouch
- D. 2x 3" Alumium Gear Track
- E. 2x 12" Aluminum Gear Track
- F. 10x #8 Phillips Head Flat Screw
- G. 5mm Hex Key
- H. 5/16" Drill Bit
- I. 8x 10-24 Flanged Tapping Insert
- J. 8x Open Round Deck Fitting
- K. Transducer Cover



## MESH TACKLE BAG INSTALLATION



For this part of the installation, gather the following items and place in stern tankwell.

- C. 2x Mesh Tackle Pouch
- G. 5mm Hex Key
- H. 5/16" Drill Bit
- I. 8x 10-24 Flanged Tapping Insert
- J. 8x Open Round Deck Fitting
- Drill (not included)

Using the provided 5/16" drill bit, carefully drill out each of the eight recesses in the tackle storage area on the stern of your Staxx (four on each side - drill locations are tick marked). **IMPORTANT:** Use caution so as to **NOT** drill through both the sidewall **and** outer wall.



# STAXX FISHING KIT INSTALLATION INSTRUCTIONS



**3.** Place a flanged tapping insert (I.) on the end of the provided 5mm hex key. Align insert with the drilled hole and tighten with key until flush with the side of your Staxx.



**4.** Next, place a 10-24 phillips head bolt (L) through an open deck fitting (J).



**5.** Place the phillips head bolt and deck fitting assembly into the flanged tapping insert on the Staxx. Tighten with phillips head bit (or screwdriver), taking care not to overtighten. The bolt and deck fitting will not be flush to the side when installed (see photo).

Repeat steps three through five until all eight stand off post assemblies are complete and installed on your Staxx.



**6.** To attach the mesh tackle bag, stretch elastic corners around each of the four stand off post assemblies. Repeat on the opposite side of the Staxx.




# STAXX FISHING KIT INSTALLATION INSTRUCTIONS

## ALUMINUM GEAR TRACK INSTALLATION




**1.** For this part of the installation, gather the following items.

- D. 3" Aluminum Gear Track
- E. 12" Aluminum Gear Track
- F. 5x #8 Phillips Head Flat Screw

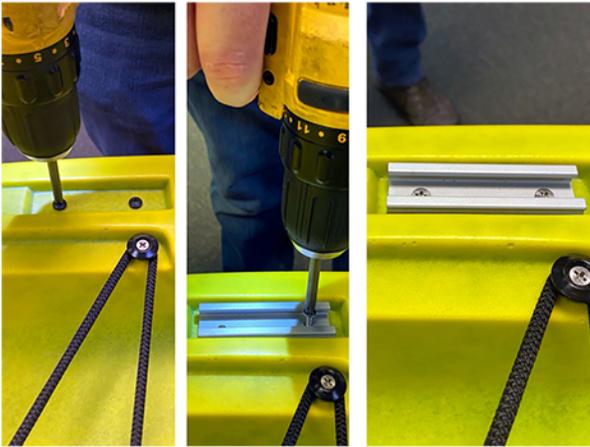

**2.** Remove the nylon screws in the 3" gear track space on the stern of your Staxx and set aside. Place 3" aluminum gear track (D) into the recess, and attach using two #8 phillips head flat screws (F).

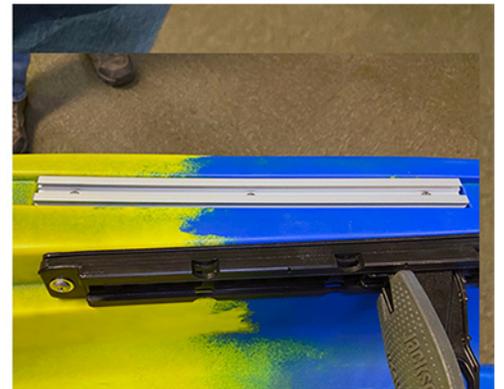


**2.** Remove the nylon screws in the 8" gear track space on the bow of your Staxx and set aside. Place 8" aluminum gear track (E) into the recess, and attach using three #8 phillips head flat screws (F). Repeat steps one through three on the opposite side of your Staxx.



# STAXX FISHING KIT INSTALLATION INSTRUCTIONS

## DUAL-LAYERED DECK PAD INSTALLATION

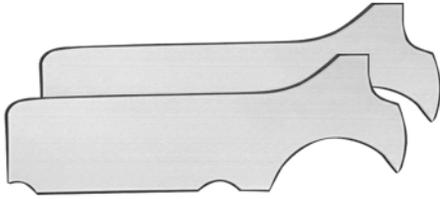


1. For this part of the installation, gather the following items.

A. Dual-Layered Deck Pad



2. Clean and wipe down deck pad area with rubbing alcohol prior to application.

3. Check fit of pad on the deck of your Staxx before removing backing.

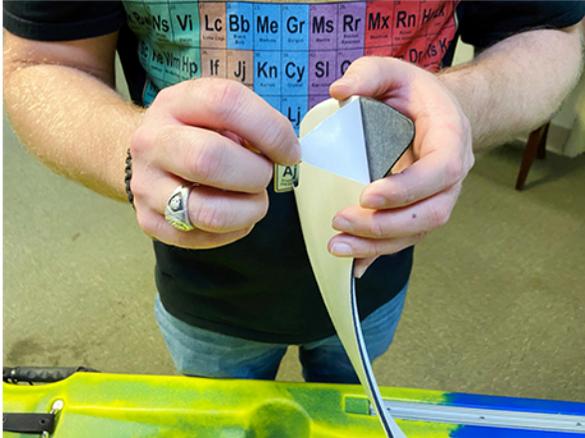

4. Heat deck area with either a torch or a hair dryer. Remove backing from deck pad and apply heat to adhesive. Slowly press down pad, starting at the end and working toward the opposite end. If bubbles occur, simply slice with a razor blade to release air.


Repeat steps one through four with second pad.

To clean, simply wash with soapy water.



# STAXX FISHING KIT INSTALLATION INSTRUCTIONS

## TRANSDUCER COVER INSTALLATION

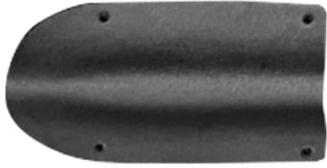

**1.** For this part of the installation, gather the following items.

- K. Transducer Cover
- Fishfinder Transducer (not included)

Front of Staxx ->



**2.** Flip your Staxx over so the bottom is exposed.

**3.** Remove the four Phillips head bolts from the transducer scupper area and set aside.



**4.** If installing a transducer, feed transducer wire through scupper hole so transducer sits flush in the transducer scupper pocket. Place transducer cover over transducer and use the four Phillips head bolts that were removed earlier to bolt the transducer cover onto your Staxx, lining your bolts up with holes in both the cover and the kayak.

